

Synchronizing JR-1 or JR-2 to JPL100

After the JPL100 has GPS lock, using the android application, set up the JPL100 to the desired “**START TIME**”, “**STOP TIME**”, “**ON CYCLE**” and “**OFF CYCLE**”.

Start the JPL100 running the interruption cycle.

Turn the JR-1(2) on and let it initialize.

On the JR-1, Set the “**START SET**”, “**STOP SET**”, “**ON CYCLE CLOSED**”, and “**OFF CYCLE OPEN**” parameters to the same values as in the JPL100.

The “**START RELAY**” Switch should be in the “**CLOSED**” position.

On the JR-1, press the “**CLOCK SET**” key but **DO NOT PRESS ENTER!**

Connect the “**SYNC CABLE**” from the JPL100 to the JR-1(2). (You must use the cable that came with the JPL100)

On the application, tap “**SYNC**” and the JR-1(2) display should change to “**LOCh06**” and countdown to “**LOCh1**” the start cycling in sync with the JPL100.

You can then remove the sync cable.

If for any reason, the JR-1(2) is powered off, you will have to perform synchronization again.

MCMILLER

772-794-9448
sales@mcmiller.com

